
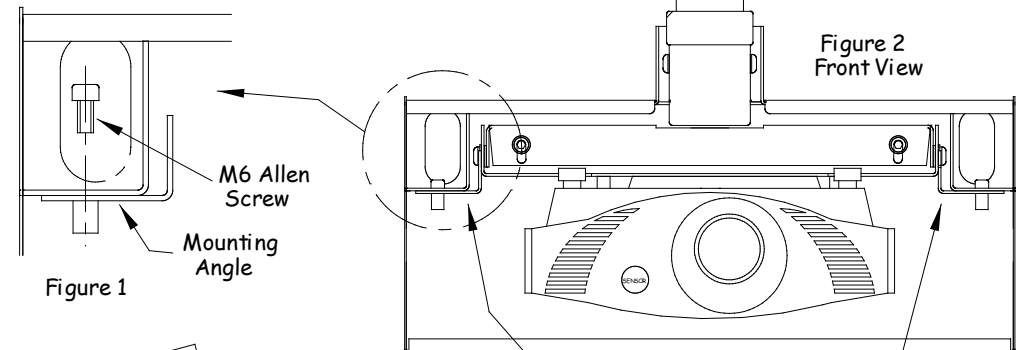



ASSEMBLY INSTRUCTIONS

REFER TO KITLIST AND CHECK THAT ALL ITEMS LISTED ARE INCLUDED IN THE KIT. THEN PROCEED AS FOLLOWS :-

1. UNLOCK THE FRONT PANEL AND REMOVE IT FROM THE ENCLOSURE.
2. SEE FIGURE 1. UNDO THE M6 ALLEN BOLTS AND REMOVE THE TWO MOUNTING ANGLES FROM THEIR DESPATCH POSITION IN THE ENCLOSURE. (USE ALLEN KEY ITEM 4).
3. SEE FIGURES 2 AND 3. FIT THE TWO MOUNTING ANGLES ONTO THE PROJECTOR MOUNT PLATE. (THE MOUNT PLATE HAS FACTORY FITTED M6 SHEETNUTS TO ACCEPT THE MOUNTING ANGLES). TIGHTEN THE BOLTS USING THE ALLEN KEY SUPPLIED WITH THE KIT, (ITEM 4).

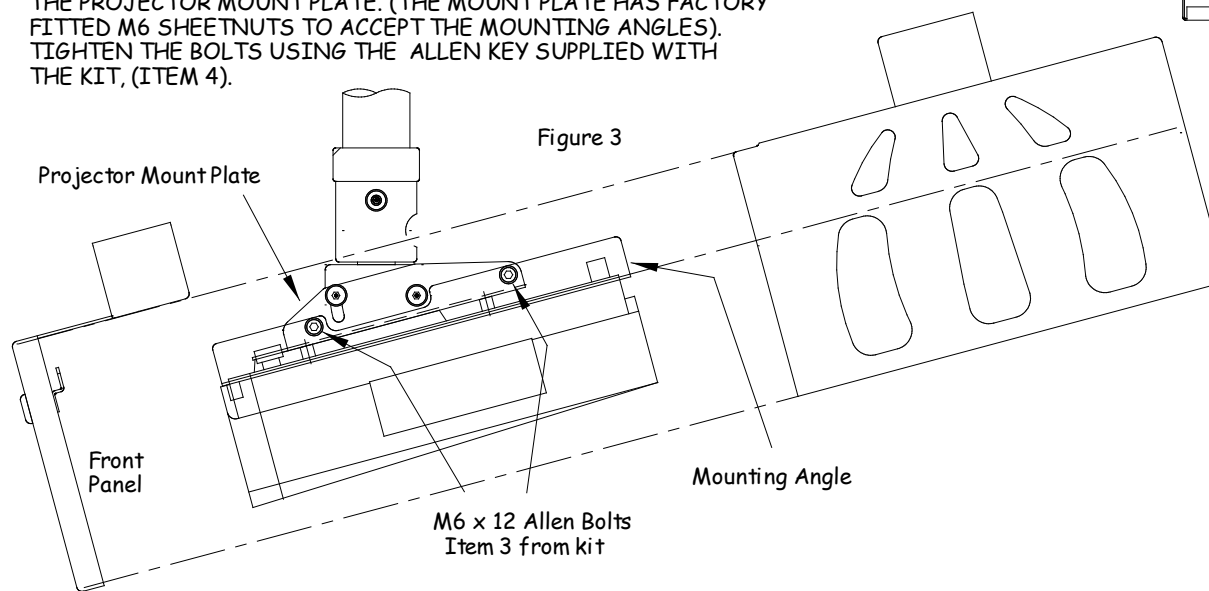

Mounting angles fitted to mount plate facing away from the projector

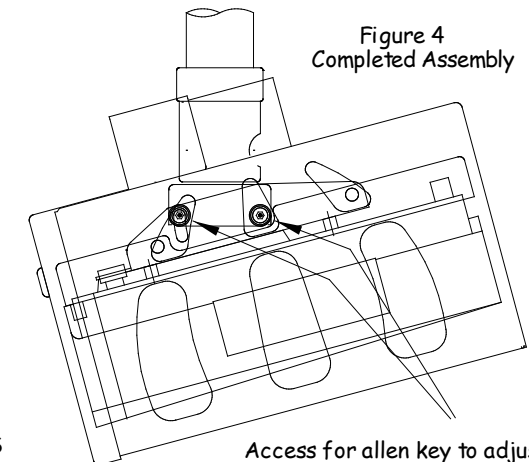

4. SEE FIGURES 2 AND 3. SLIDE THE CASE ONTO THE MOUNTING ANGLES.
5. SEE FIGURES 1 AND 2. ADJUST THE CASE POSITION AND ALIGN THE CASE SLOTS WITH M6 SHEETNUTS FITTED TO THE MOUNTING ANGLES. REFIT THE ALLEN BOLTS REMOVED EARLIER (NOTE2) AND TIGHTEN.
6. FIT THE FRONT PANEL AND LOCK IN PLACE.

ADJUSTMENT

THE ENTIRE ASSEMBLY WILL PAN ON THE MOUNTING SOCKET. FIGURE 4 SHOWS ACCESS FOR FORWARD TILT ADJUSTMENT. THE ENCLOSURE MUST BE REMOVED FOR SIDE TILT, SEE PSU ASSEMBLY INSTRUCTIONS, (9560066), FOR DETAILS.

sahara

PROJECTOR SECURITY ENCLOSURE
ASSEMBLY INSTRUCTIONS

9650067